

VER10820097360



STEREORADIO CRC 7360



Symbol photo

USER MANUAL



CREATE MORE XITEMENT

Imprint

All rights reserved. Any reproduction without consent of cmx® is prohibited.

cmx® reserves the right to modifications of the device.

Designed by cmx® in Europe | Assembled in China

TM©2009 cmx electronics

CONTEXTS

1. GENERAL	- 1 -
1.1. Safety precautions.....	- 1 -
1.2. Disposal of waste electronic equipment	- 1 -
1.3. Battery disposal	- 2 -
1.4. Copyright	- 2 -
1.5. Hearing protection	- 2 -
1.6. Cleaning and maintenance.....	- 3 -
2. FEATURES.....	- 3 -
3. LOCATION OF CONTROLS.....	- 4 -
3.1. Main unit	- 4 -
4. PREPARATION	- 5 -
4.1. Connection with cable	- 5 -
4.2. Operation with batteries.....	- 5 -
5. CD-PLAYER	- 6 -
5.1. Insert CD / MP3 CD.....	- 6 -
5.2. CD / MP3 CD playback.....	- 6 -
5.3. Program CD/MP3 tracks.....	- 7 -
6. RADIO	- 7 -
6.1. Listen to radio.....	- 7 -
7. EXTERNAL COMPONENTS	- 8 -
7.1. Connect earphones	- 8 -
7.2. USB 2.0	- 8 -
8. TROUBLESHOOTING	- 9 -
9. WARRANTY	- 10 -
9.1. Warranty Procedure	- 10 -
9.2. Warranty has expired	- 11 -
9.3. Shipping the Unit	- 11 -
10. IN THE BOX	- 15 -
11. TECHNICAL SPECIFICATIONS.....	- 16 -

1. General

1.1. Safety precautions

-  Only connect to mains power supply (230 Volt/50Hz).
-  Do not place the device in close proximity of water (e.g. sink, wash basin, etc.). The device can fall into the water and cause a short circuit.
-  The device consumes some power during standby operation. For zero power consumption disconnect from mains power supply.
-  Place the device on a stable surface to prevent it from tipping over and causing damages or injuries.
-  Condensation can form if the device is placed in cold surroundings. Leave the device for at least one hour in standby mode.
-  Do not subject the device to direct sunlight or high temperatures, this can result in fire.

1.2. Disposal of waste electronic equipment

Your product is manufactured from high quality raw materials and should be recycled.



Ask your municipality for collecting points for waste electronic equipment.

Do not dispose of old appliances with the household waste.



The symbol on the product, the instructions for use or the packing will advert about the methods for disposal.

1.3. Battery disposal

The law requires returning exhausted batteries to public collection points or to the dealer.

Do not dispose of exhausted batteries with the household waste.

1.4. Copyright

It is illegal to copy, send exhibit, broadcast via cable, publicly show or rent copyrighted materials without consent.

1.5. Hearing protection

- 👉 Select a moderate volume to protect your hearing.
- 👉 Only turn the volume to a level where you can still hear ambient noise.

1.6. Cleaning and maintenance

 Before cleaning disconnect from mains power supply.

 Cleaning the casing

Clean the casing with a dry cloth.

 Cleaning CDs

Clean CDs with a soft cloth from the centre to the edge.

 Do not use pointed or sharp utensils for cleaning, this will damage the CD.

 Cleaning the laser

Dust or dirt can collect on the laser pick-up. Only use a commercially available special cleaner.

 Do not clean with liquid cleaning agents or a wet cloth, this can cause a short circuit.

2. Features

This stereo radio can play all Audio CDs and MP3 CDs.


Music playback is also possible via USB port.

You can operate the stereo radio with a power cable or batteries.

 Batteries not included in delivery!

3. Location of controls

3.1. Main unit

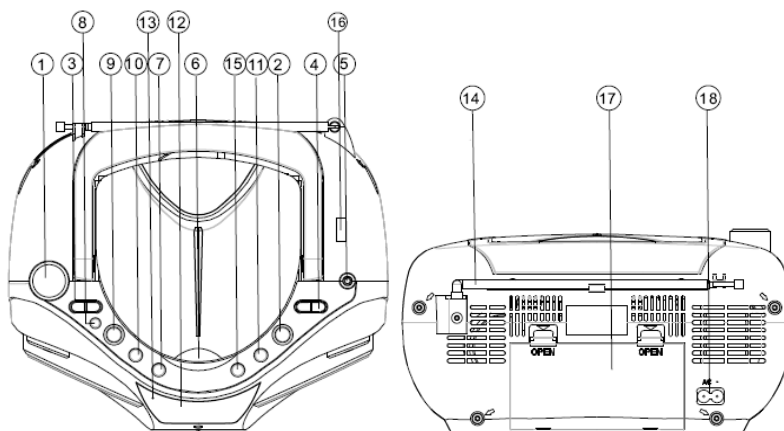

1	-VOL+	Decrease volume Increase volume
2	Tuning	Select radio function
3	FUNCTION	Function selector MP3/CD, OFF, RADIO
4	AM/FM/FM ST.	Switch to AM/FM/FM ST.
5		Earphones / headphones jack
6	CD drive	Open CD drive
7	BACK	Rewind / previous track
8	STOP	Stop playback
9	USB/PLAY/PAUSE	Start and pause playback USB: Function selector USB
10	NEXT	Fast forward / next track
11	REPEAT/RANDOM	Select play mode
12	LCD	Display

13	FM ST	LED for FM Stereo
14	FM ANT	Radio antenna
15	PROGRAM	Program mode
16	USB JACK	Port for USB stick / Mp3 player
17	Battery compartment	8 x 1,5V, UM-2/C/LR14
18	AC	230 Volt

4. Preparation

4.1. Connection with cable

Follow these steps to connect the system:

1. Connect the mains power cable first to the system and then to a wall outlet.

4.2. Operation with batteries

1. Open the battery door and insert 8 batteries (1,5V, UM-2/C/LR14).

 Please observe correct battery polarities.

 When the set is not used or is only used with “AC”, please remove the batteries, to avoid damage to set from leakage of batteries.

5. CD-Player

5.1. Insert CD / MP3 CD

1. Lift the CD-loading upward.
2. Insert a CD with the label up and carefully press it down onto the ball bearing spindle.
3. Close the CD drive manually.

5.2. CD / MP3 CD playback

1. Set the function switch to **MP3/CD**.
2. Press **USB/PLAY/PAUSE** key and the disk will start spinning and then playing the first song (track).

This system can play CDs in different playback modes.

1. Press **REPEAT/RANDOM**

Setting	playback
Repeat (press once)	Repeat current track.
Repeat All (Press twice)	Repeat all tracks on the CD.
Random or Shuffle (press triply)	Repeat all tracks on the CD in random order.

5.3. Program CD/MP3 tracks

You can program your own playlist with up to 99 tracks.

1. During CD /MP3 playback press the **STOP** button before programming.
2. Press the **PROGRAM** button until P01 is displayed.
3. Press **NEXT** or **BACK** on the remote control until the desired track is displayed.
4. Press **PROGRAM** button to confirm.
5. Repeat step 3 and 4 to program further tracks.
6. Press **USB/PLAY/PAUSE** button to start.

6. Radio

6.1. Listen to radio

1. Set the function switch to **RADIO**.
2. Select **AM**, **FM** or **FM Stereo**.
3. Turn the tuning knob to tune into your favourite radio station.

 For best reception point the antenna in a different direction or choose a different location.

7. External components

7.1. Connect earphones

1. Connect you earphones or headphones.

The speakers are muted if earphones are connected.

 To avoid hearing problems do not use earphones or headphones for an extended period of time.

 Increased sound pressure from earphones or headphones can cause hearing loss.

7.2. USB 2.0

Extend your system by connection your MP3 player or USB stick.

 Do not disconnect the device when „USB“ mode is selected.

1. Connect your MP3 player or USB stick.
2. Set the function switch to MP3/CD.
3. Press USB/PLAY/PAUSE, for 2 seonds, until “USB” is displayed.
4. Press USB/PLAY/PAUSE to start playback.

 To avoid damage only disconnect the device after pressing the STOP button and selecting a different mode with the function selector.

8. Troubleshooting

Contact the service hotline or use the contact form on the homepage in case of problems with the system that are not dealt with here.

Malfunction	solution
„No disc“	▪ Insert a CD. ▪ Insert a finalized CD-RW or CD-R. ▪ Insert the CD with the label up. ▪ Try another CD or clean the CD.
Bad reception	▪ Increase the distance to TV set or DVD player. ▪ Point the antenna in a different direction.
System does not respond	▪ Disconnect from mains power supply and reconnect after a few seconds.
No sound	▪ Increase the volume. ▪ Disconnect the earphones.
No CD playback	▪ Check you CD for damages or scratches. ▪ Insert the CD with the label up.

9. Warranty

This system comes with a 24-month warranty from the date of purchase.

Please keep your purchase documents!

In case of manufacturing or material defects the warranty consists of rectification of defects or exchange.

The warranty does not include damages or

- ☺ malfunctions due to improper use
- ☺ wear and tear
- ☺ repairs by third parties

The warranty does not include

- ☺ display damage
- ☺ accidental damage.

Repair does not extend the warranty period.

9.1. Warranty Procedure

In case of malfunctions, please contact:

- ☺ Your dealer
- ☺ Service hotline
 - Austria: +43 0720 502671 – please dial with the zero!
 - Germany: +49 (0)180 166 66 264 621

- Switzerland: +41 (0) 848 00 3322
- 👉 Contact form – www.cmx-electronics.com

9.2. Warranty has expired

Please contact us by phone or contact form in case your warranty has expired. We will help you!

Please inform us about the following:

- 👉 Unit type
- 👉 Purchase date
- 👉 Malfunction

9.3. Shipping the Unit

To ensure a quick response, please observe the following in case you send us the unit:

- 👉 Send unit plus accessories
- 👉 Send postage free to service centre
- 👉 Attach purchase documents
- 👉 Attach filled-out warranty card
- 👉 Error description

Example for error description

Wrong

Unit is defective

Correct

Unit does not respond

Unit malfunctions

Unit cannot be switched on

- 👉 Sender information: Name, address, ZIP code, city and phone number and e-mail address.

Cut out the warranty card!



CREATE MORE XITEMENT

2 Jahre Garantie auf Gerät und Zubehör

Die Garantie ist nur gültig bei gleichzeitiger Vorlage von Rechnung und Garantiekarte.

Der Garantieanspruch erlischt unter folgenden Bedingungen:

- ❗ Ändern oder entfernen der Seriennummer,
- ❗ Änderung oder Verlust der Garantiekarte,
- ❗ Kauf bei nicht autorisiertem Händler.

Bei falscher Anwendung, Missbrauch oder versehentlicher Beschädigung des Gerätes, erlischt der Garantieanspruch. Dazu zählen:

- ❗ Fehlfunktion, die durch das Gerät nicht geeignete Versorgungs- /Betriebsspannung verursacht wurden,
- ❗ Mechanische Beschädigung,
- ❗ Durchgeschnittene Kopfförerkabel.

Die Vertragsbedingungen können ohne vorheriger Benachrichtigung geändert werden.

2 years guarantee period for product and accessories

Guarantee is valid only when dealer's invoice is presented together with this guarantee card.

Guarantee does not cover under the following conditions:

- ❗ Serial number has been altered or removed,
- ❗ Guarantee card is lost or amended,
- ❗ Purchase at unauthorized dealer.

Guarantee will be treated as void if product being misused incorrectly used or damaged accidentally, including:

- ❗ Malfunction caused by irregular voltage supply,
- ❗ Mechanical damage,
- ❗ Cut earphone cables.

Terms subjected to change without previous notice.

Darius HandelsgmbH · Konstanziagasse 31-35 · 1220 Wien · Austria · sales@darius.at



CREATE MORE XITEMENT

GARANTIEKARTE GUARANTEE CARD

Produkt

Product

Seriennummer

Serial number

Händlername

Dealer's name

Kaufdatum

Date purchased

Darius Servicecenter · Ödenburgerstrasse 21-23 · 1210 Vienna ·
Austria | Service MO - DO 8.00 - 16.30 · FR 8.00 - 13.00 · |
Hotline Austria +43 (0) 720 50 26 71 (Inlandstarif) |
Hotline Germany +49 (0) 180 166 66 264 621 |
Hotline Switzerland + 41 (0) 848 00 33 22

Darius HandelsgmbH · Konstanziagasse 31-35 · 1220 Wien · Austria · sales@darius.at

10. In the box

Please contact your dealer directly in case one of the accessories is missing or damaged.

Images are representative pictures for reference only!



Power cable



User manual

11. Technical specifications

CD-Player	
Formats	Audio-CD / Audio-CD-R / Audio-CD-RW / MP3-CD / MP3 CD-R / MP3 CD-RW
Radio	
Frequency bands	AM / FM / FM Stereo
frequencies	AM 520 – 1620 kHz
	FM 87,5 – 108 MHz
Connectors	
Inputs	USB 2.0
Outputs	3,5 mm headphones
Speakers	
Power output	Max. 80 watt PMPO
General	
Power consumption	17 Watt
Mains power	AC 230 V ~ 50 Hz
dimensions	275 x 154 x 229 mm



CREATE MORE XITEMENT

www.cmx-electronics.com